



## ***INSTALLATION INSTRUCTIONS***

856.768.8300 • [Support@GlowShiftGauges.com](mailto:Support@GlowShiftGauges.com)

### **7 Color Series 4 Gauge Power Wiring Harness**



1. **Red Wire – Connects to a Switched 12 Volt Source:** The red wire connects to an ignition source that turns power on and off with your vehicle. You can use GlowShift's Expandable Circuit to power your gauges from a switched 12-volt source directly from the fuse box. The Expandable Circuit is an optional power accessory that is sold separately from the power harness.
2. **Yellow Wire – Connects to a Constant 12 Volt Source:** The yellow wire connects to the positive terminal of your car's battery. This is the color memory wire that will allow your gauges to recall the color that was last displayed on the gauge face. You can also connect the yellow wire to a constant 12-volt source from the fuse box by using GlowShift's Expandable Circuit.
3. **Black Wire – Connects to Vehicle Ground:** The black wire connects to any bare metal ground source on your vehicle. You can also connect this wire to the negative terminal of the battery.
4. **Orange Wire – Connects to Headlight Switch Source:** The orange wire connects to your positive 12-volt headlight source wire to dim the gauges 30% while operating at night.

All GlowShift Products are subject to the GlowShift Limited Warranty. Please visit <https://www.glowshiftdirect.com/warranty-policies> to review complete Warranty, Terms, and Conditions